


SETUP INSTRUCTIONS

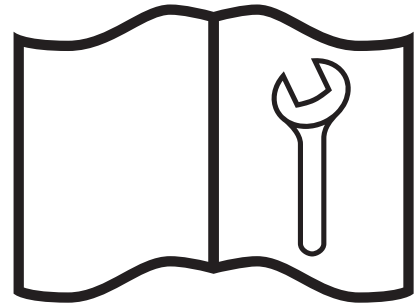

WXT15V

WXT20V

WXT30V

Safety

WARNING!

Do not assemble the machine before you read the assembly instructions in this manual. Make sure that you understand the safety information and each step of the procedure before you assemble the machine.

Keep this manual with you and available for frequent reference while you assemble the machine.

WARNING!

Use a hoist to lift machine components that weigh 50 lb (23 kg) or more. Do not lift machine components that weigh more than you can lift without strain or injury.

WARNING!

Use lift equipment with a lift capacity that is greater than the weight of the machine component. Use jack stands or wood blocks to support the machine and make it safe for assembly.

WARNING!

Use the correct tools and equipment to assemble the machine. The use of incorrect tools can create safety hazards. A tool that breaks or slips during assembly can cause personal injury. Repair or replace equipment or tools that are broken or defective.

WARNING!

All lift equipment (for example, straps, slings, chains, or ratchet blocks) must comply with the applicable local laws, standards, and regulations. Wallenstein Equipment does not accept responsibility for the use of unsafe equipment and work practices.

WARNING!

Know the location of overhead power lines and obstructions and keep away from them when you lift the machine. Contact with power lines can cause electrocution. Contact with overhead obstructions can damage the machine or components.

WARNING!

Do not start or operate the machine before you read the Operator's Manual. Make sure that you fully understand all the safety, operation, and maintenance information before you operate the machine.

Keep the Operator's Manual with the machine and available for reference at all times.

WARNING!

Make sure that all the fasteners are installed and torqued to the correct specifications. For more information, see *Specifications on page 21*.

CAUTION!

Keep the assembly area clean and free of debris to prevent slips, trips, or falls.

IMPORTANT! Inspect the machine for damage from shipping. Contact the shipping company immediately if you find any machine damage.




Some components are attached to the skid with a shipping bracket and/or screws. Make sure that you only discard shipping brackets and screws, and not machine components.

Put the crate in a large, open area for assembly. Make sure that you can access the machine from all sides.


Learn what the safety labels mean and know the safety hazards.

WXT15V

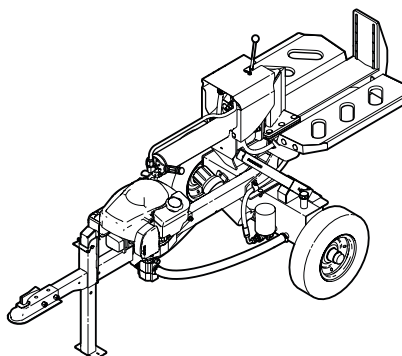


WXT15V

WXT20V

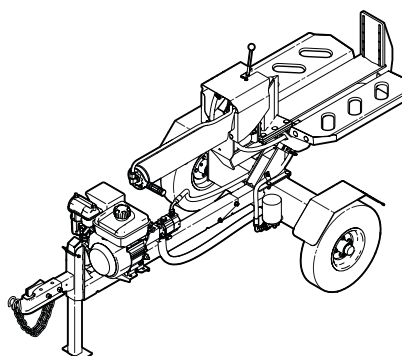


WXT20V

WXT30V

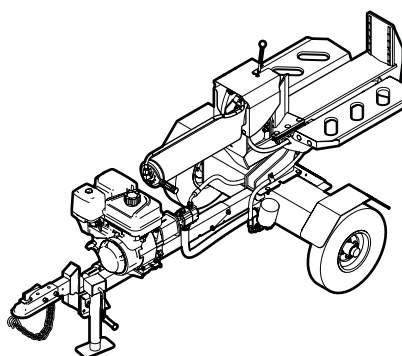

WXT30V

The assembly hardware and Operator's Manual are in the document storage tube.

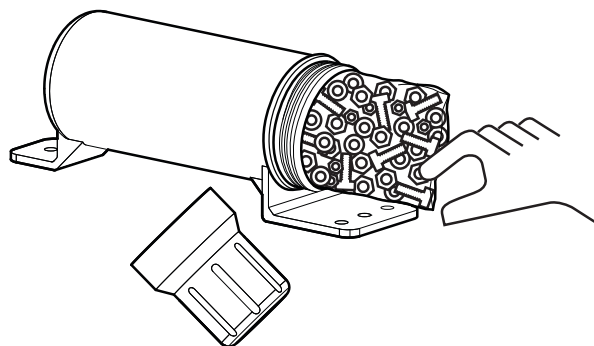


The hydraulic fluid reservoir contains hydraulic fluid and the engine contains oil. Keep all hoses attached to the machine.




i

WXT15V

1

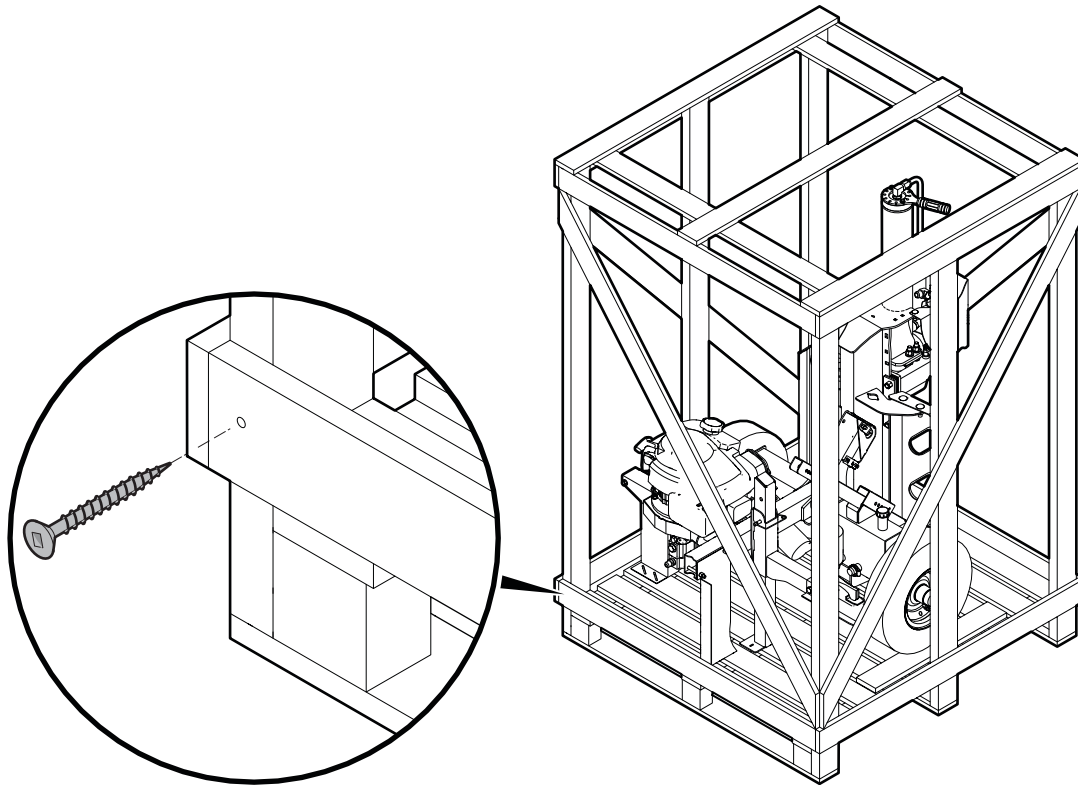


2




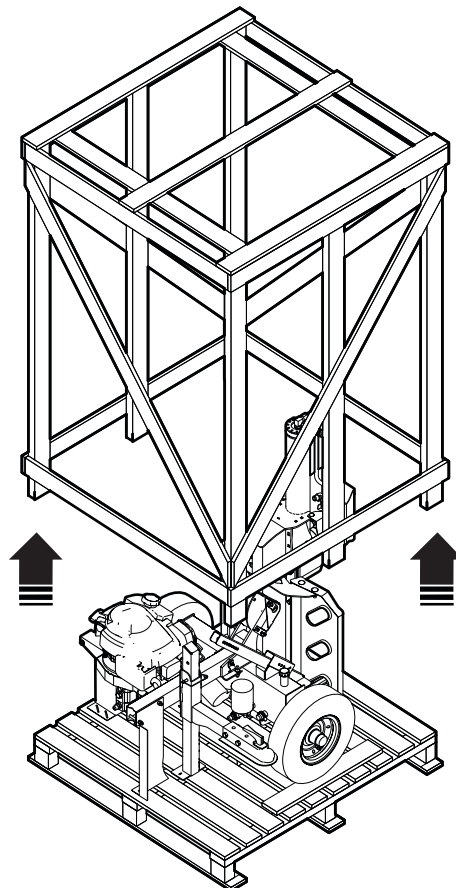


WXT15V

3

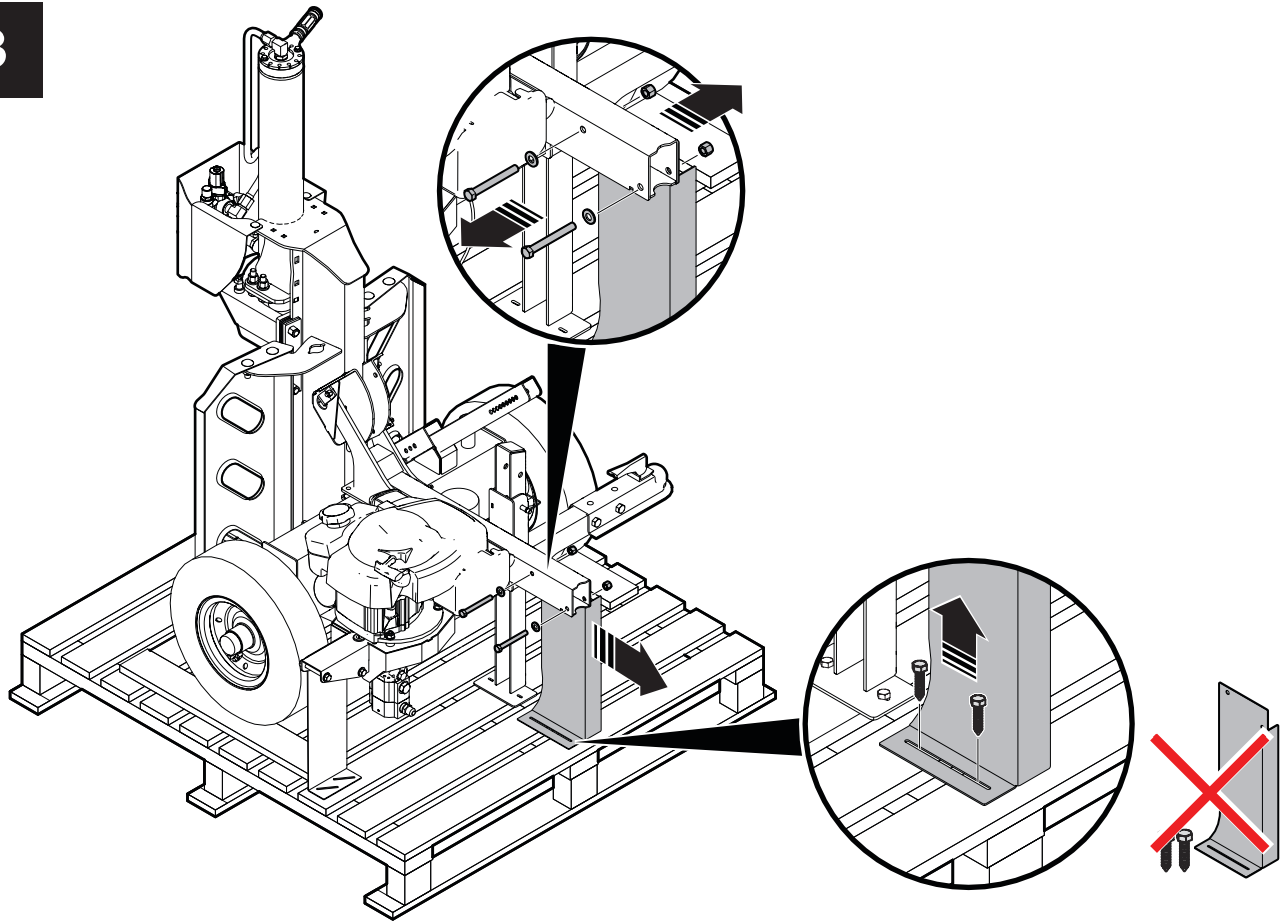


4

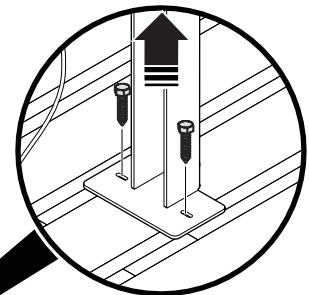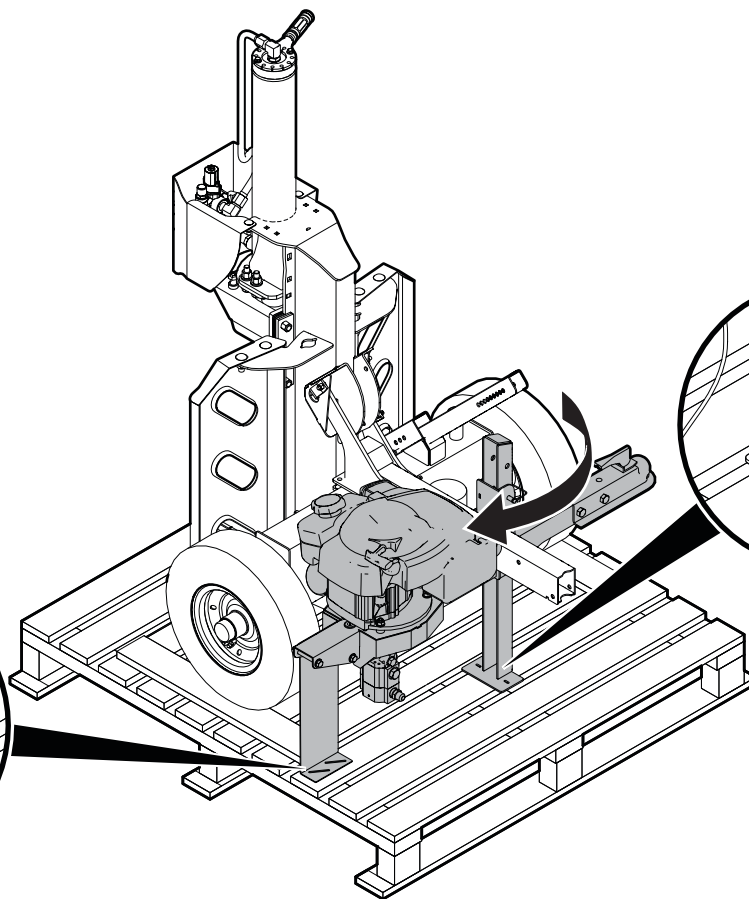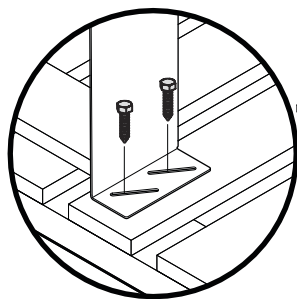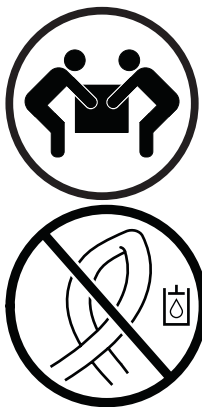


WXT15V

5

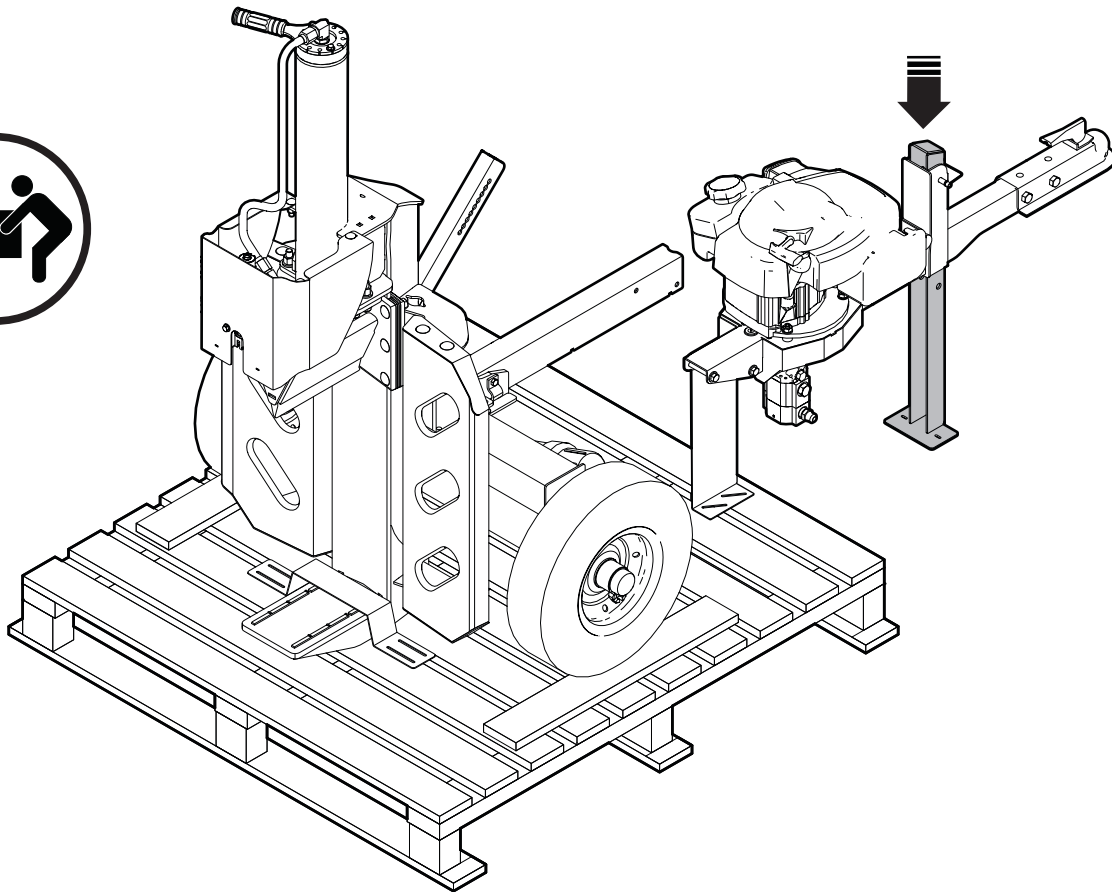


6

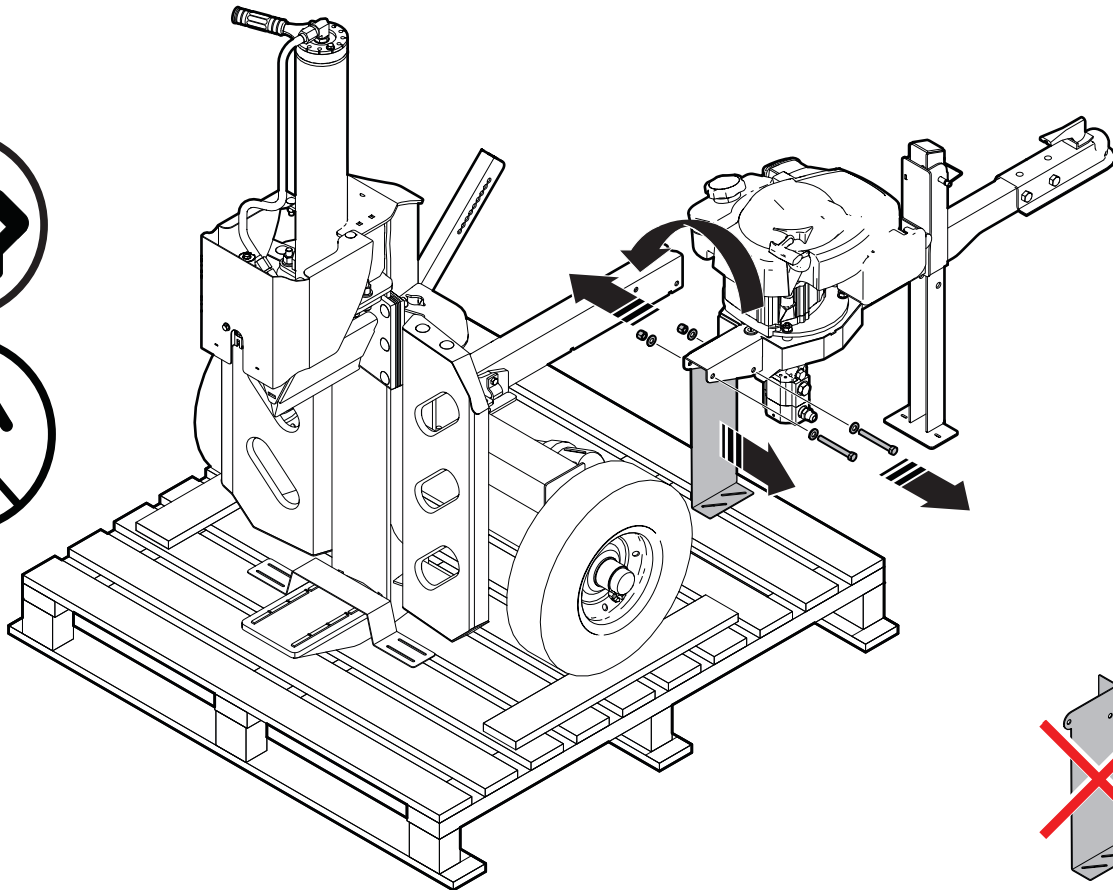


WXT15V



7

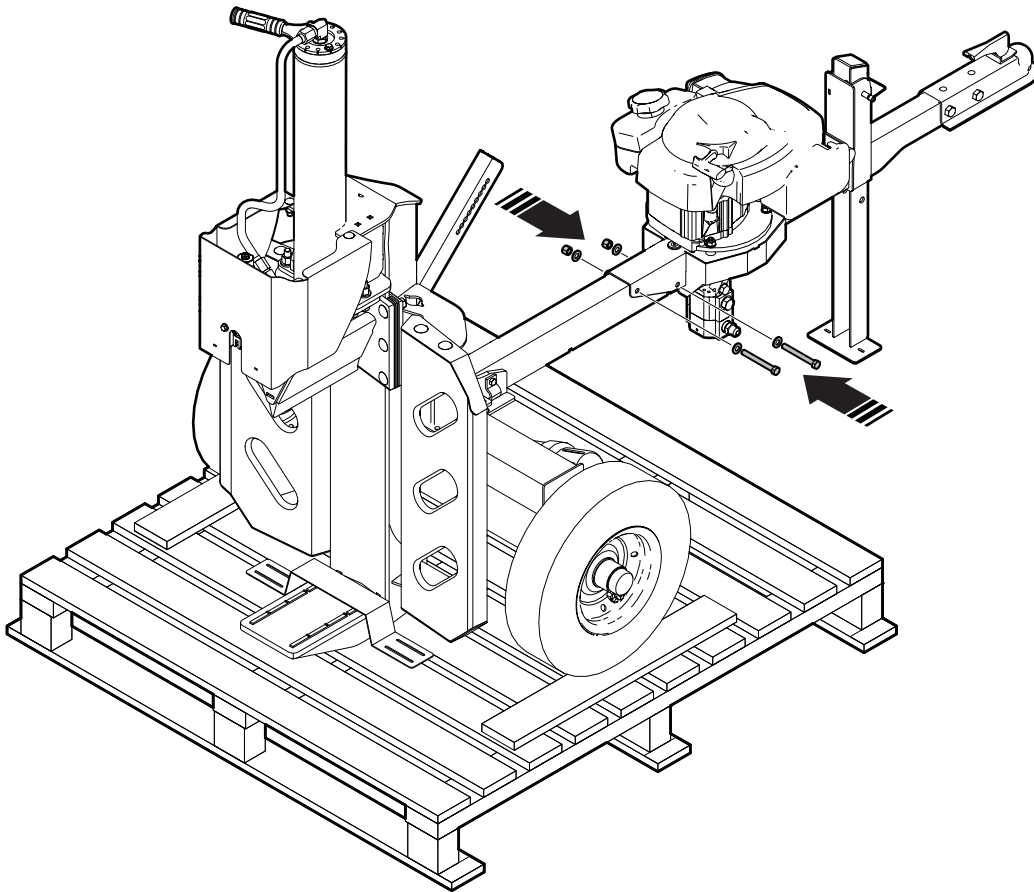

8

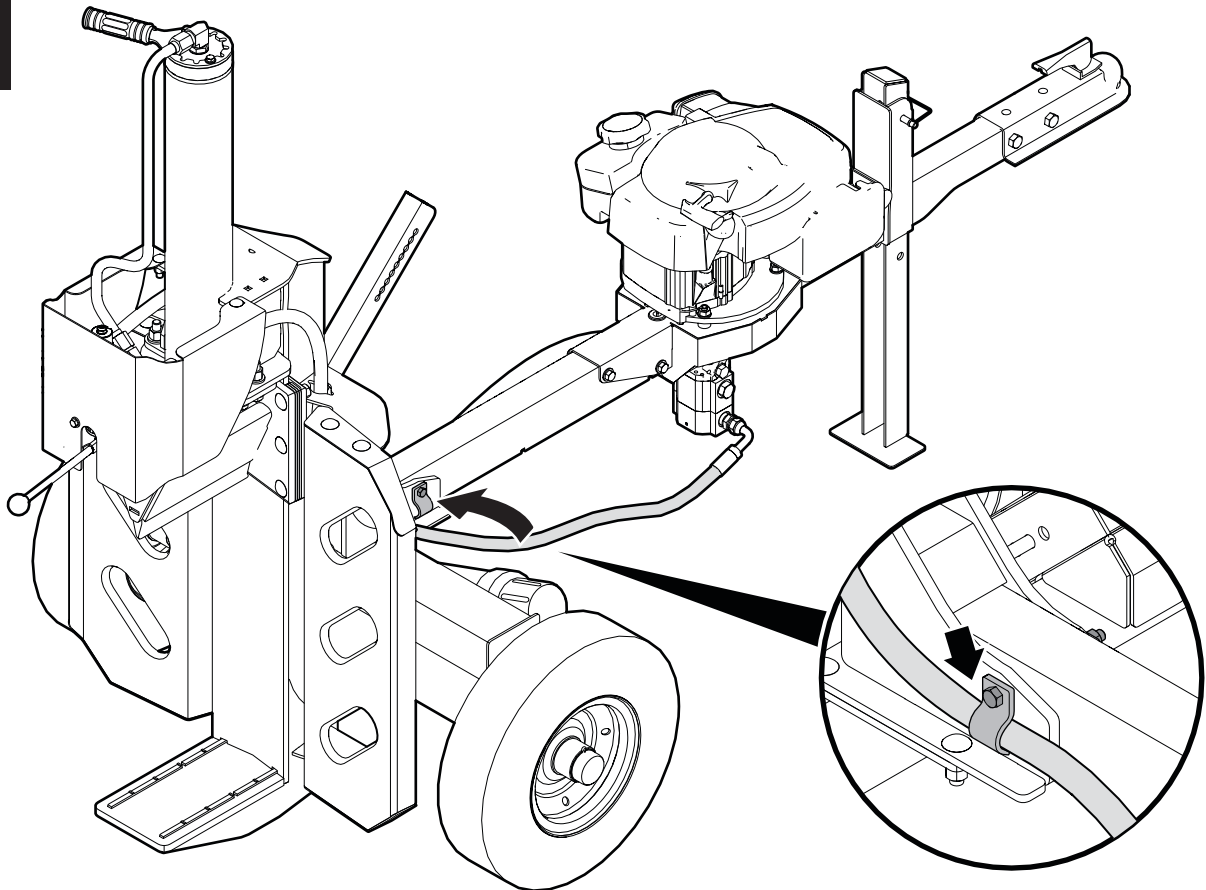


9

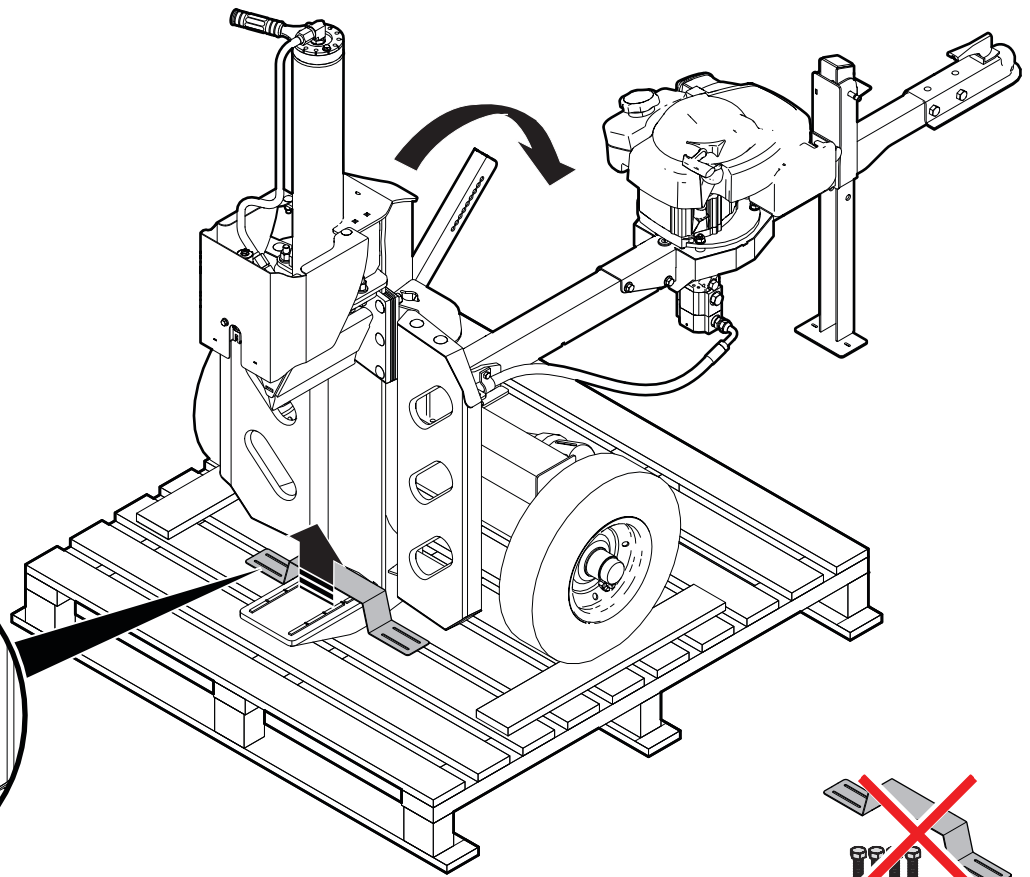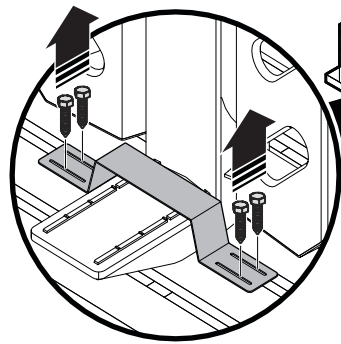


WXT15V


10

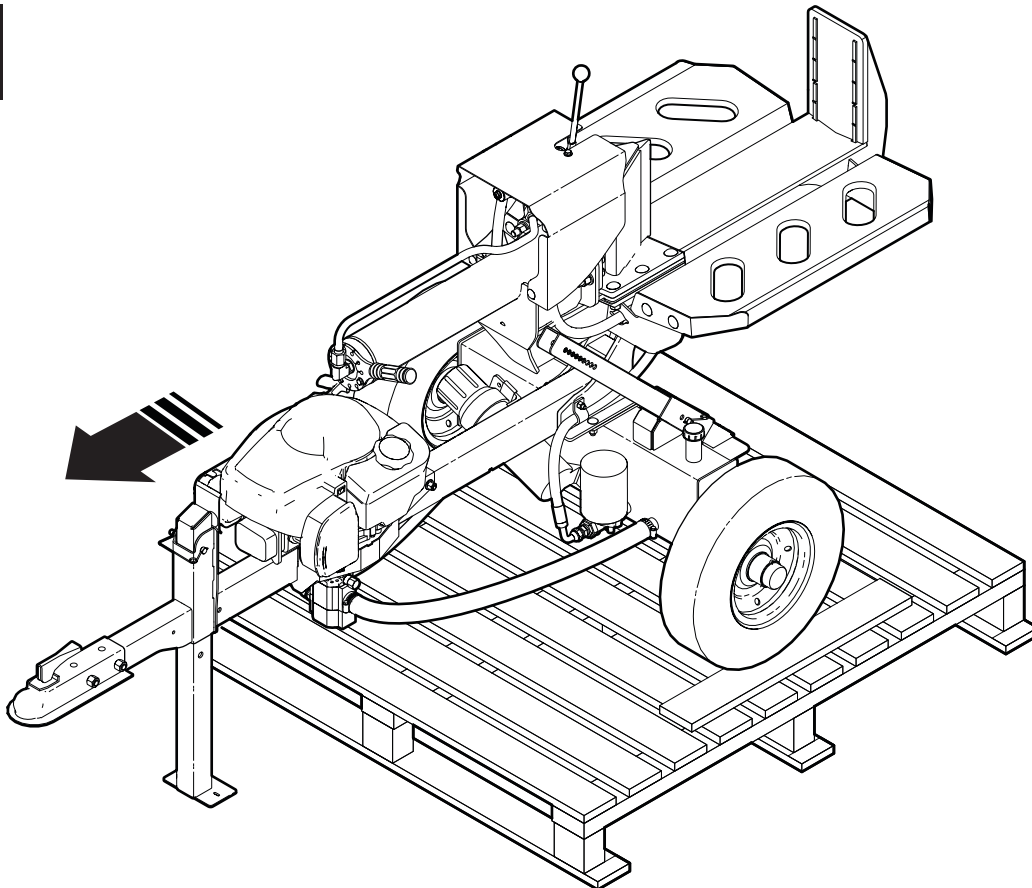

1

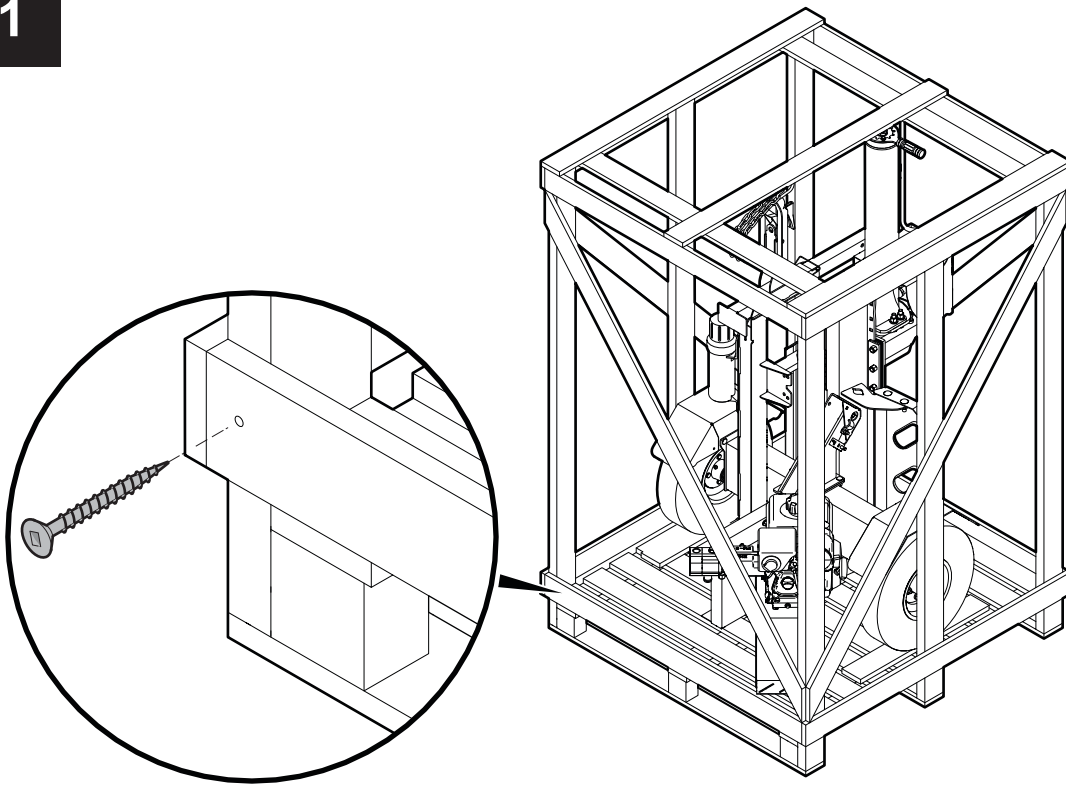


2

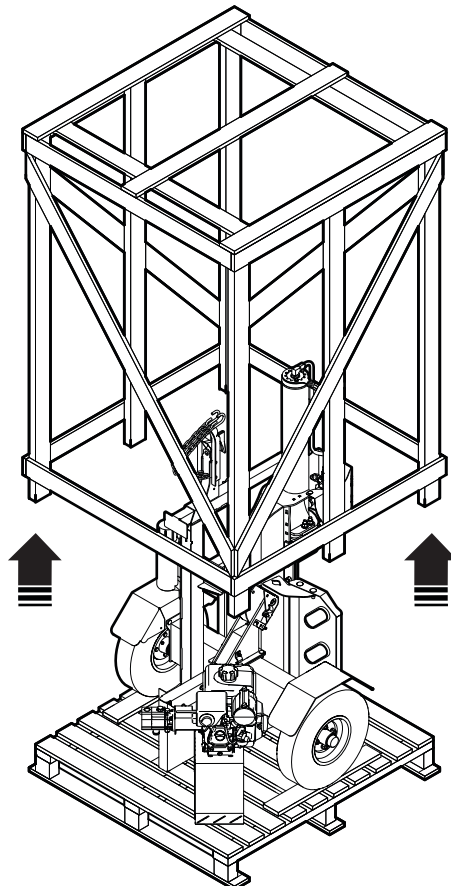


WXT20V

3

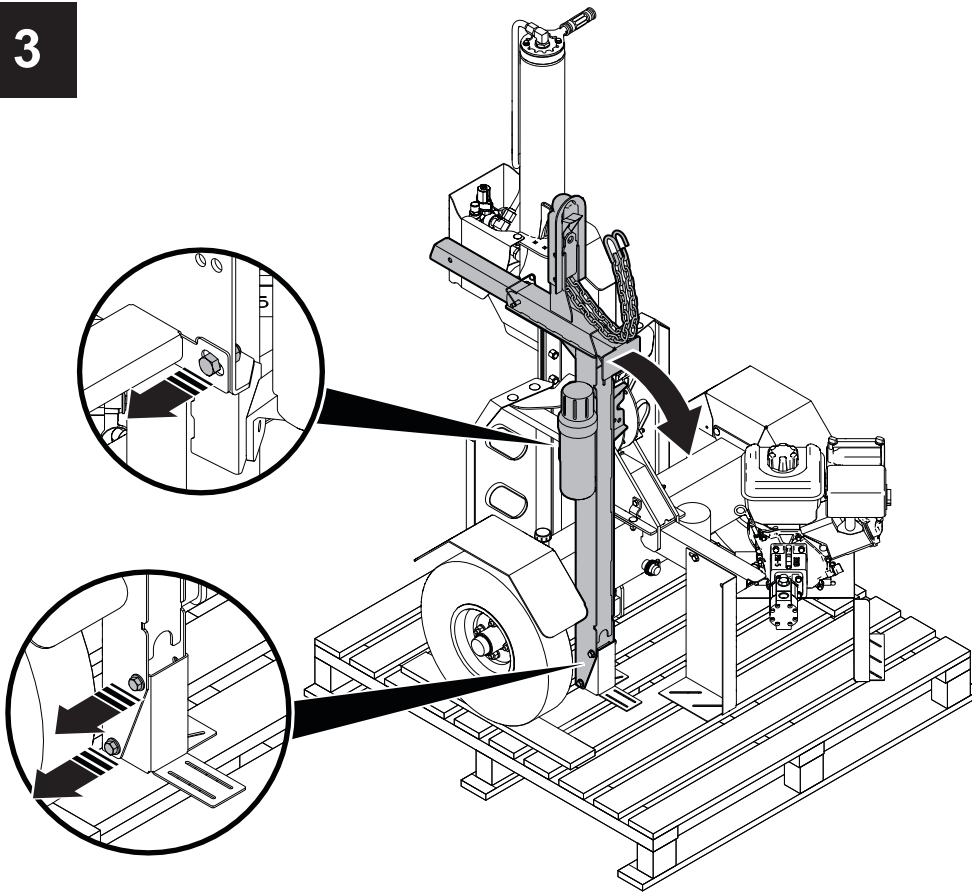


WXT20V

4


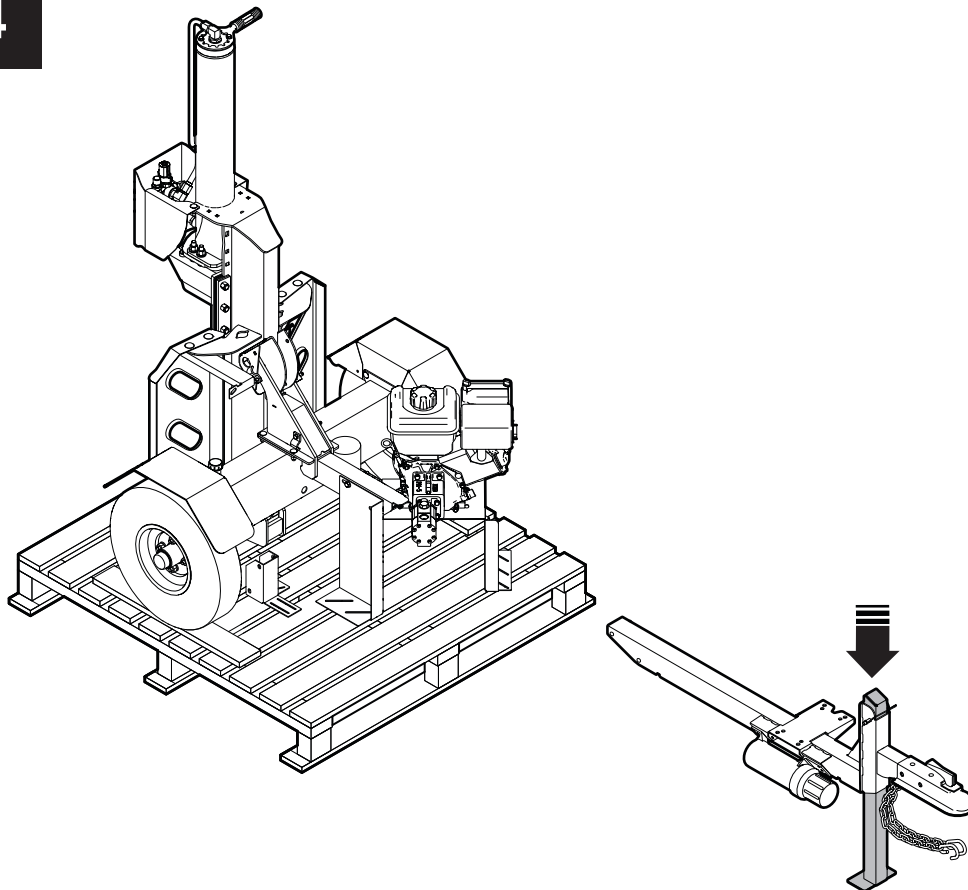


5

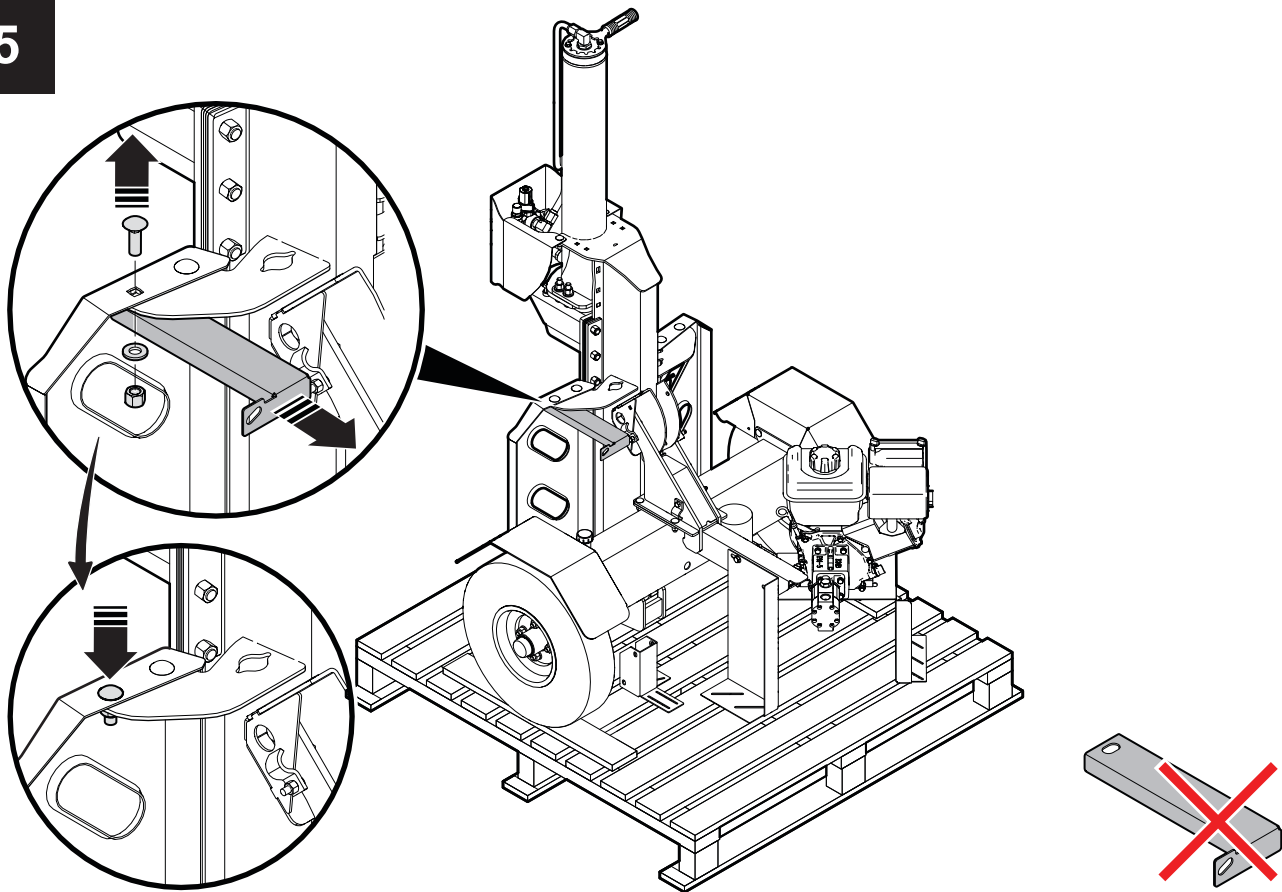


WXT20V

6

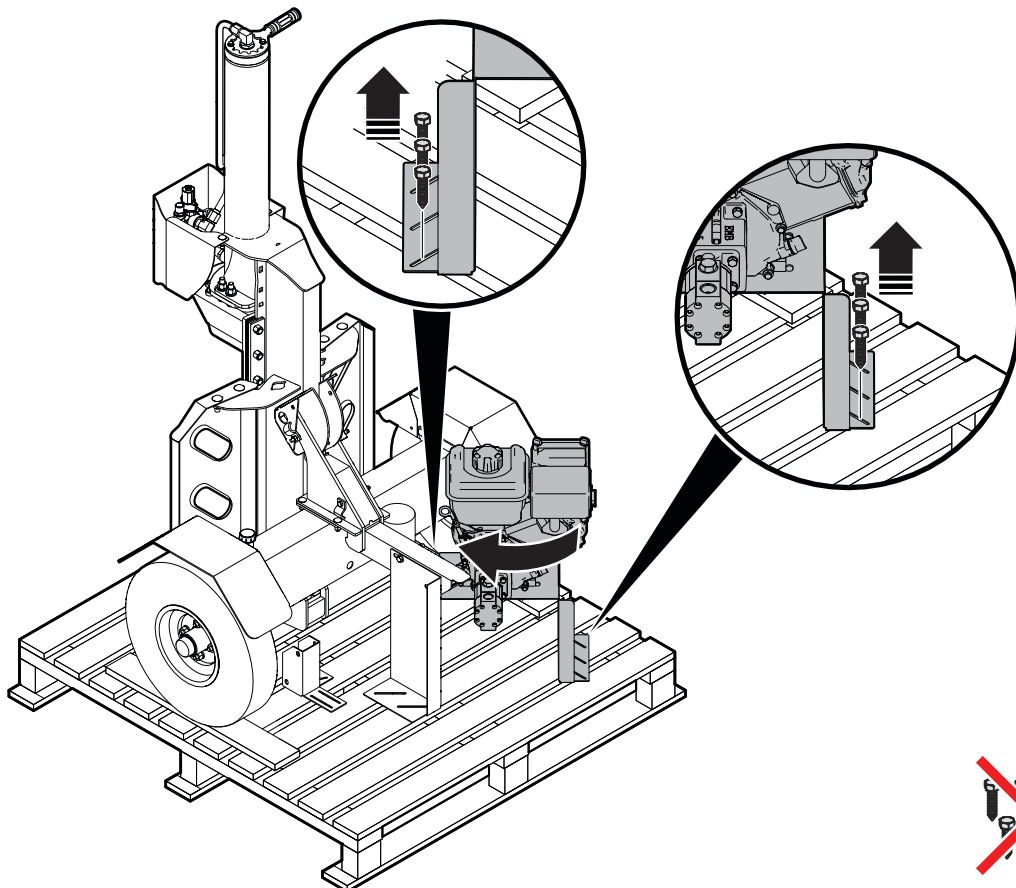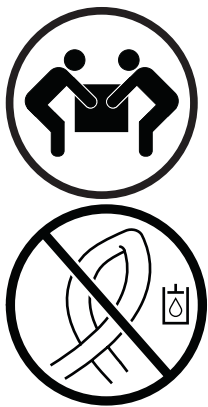


7

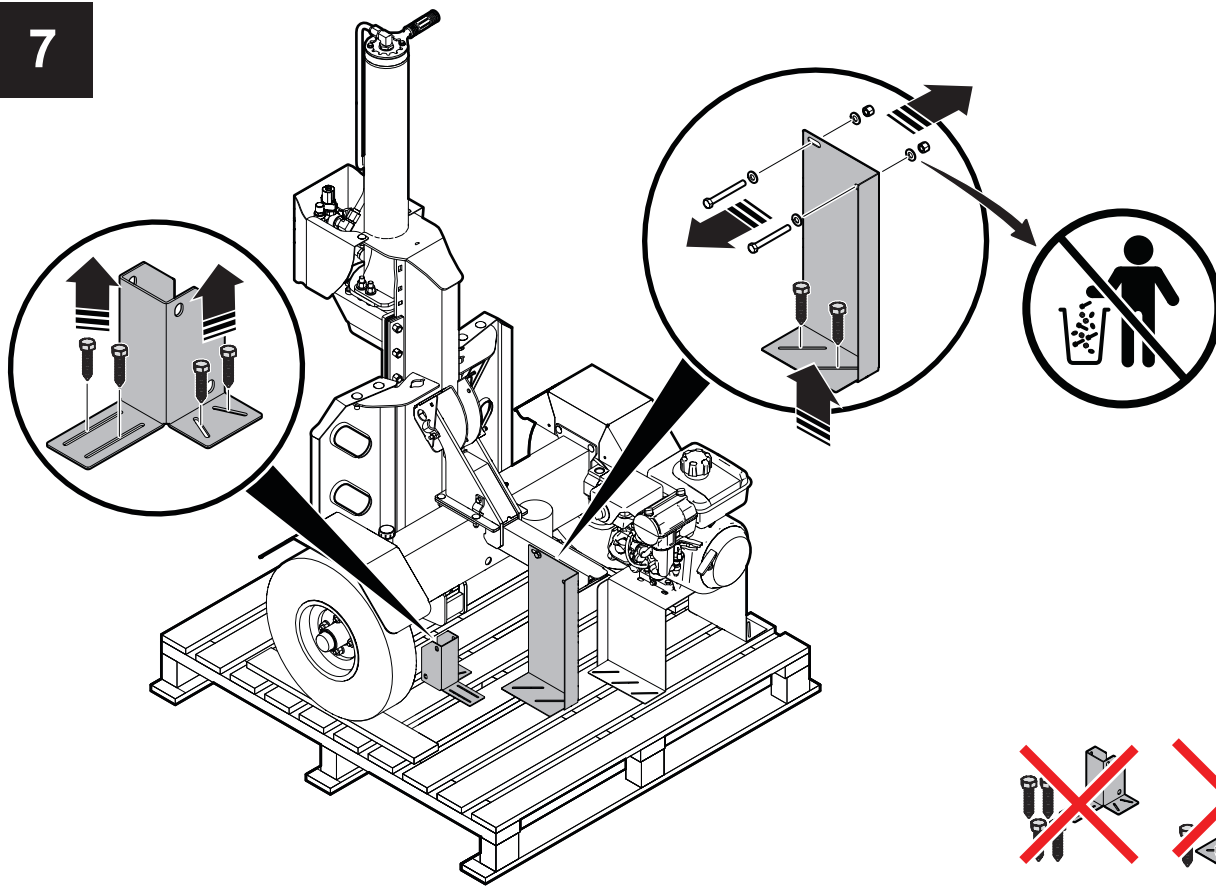


WXT20V

8

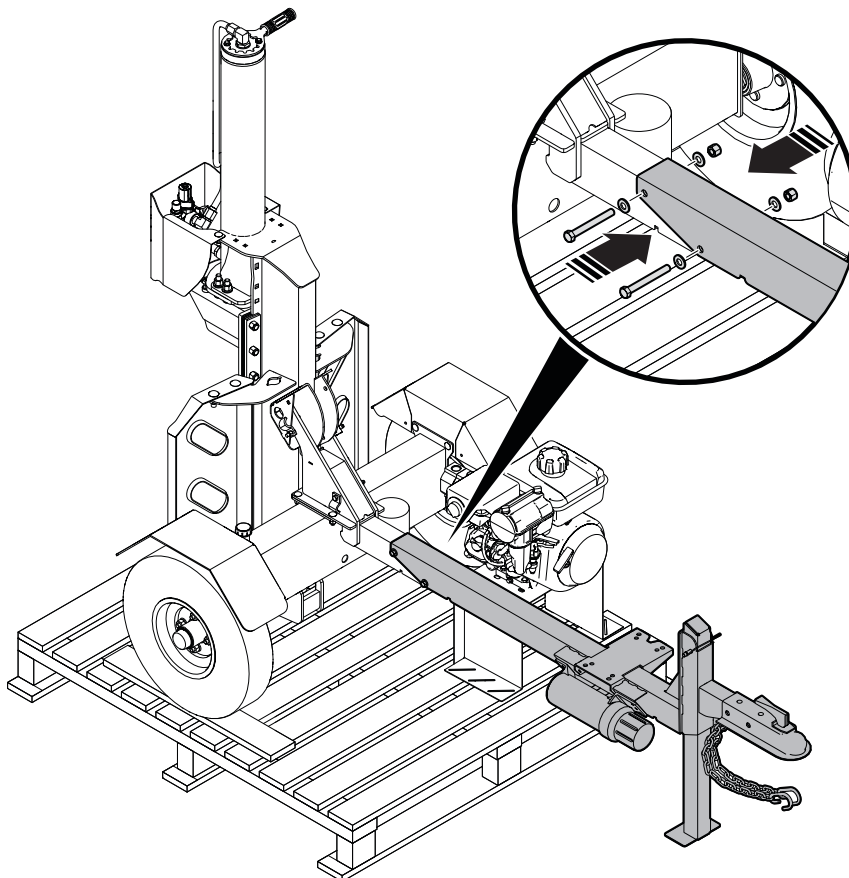


9

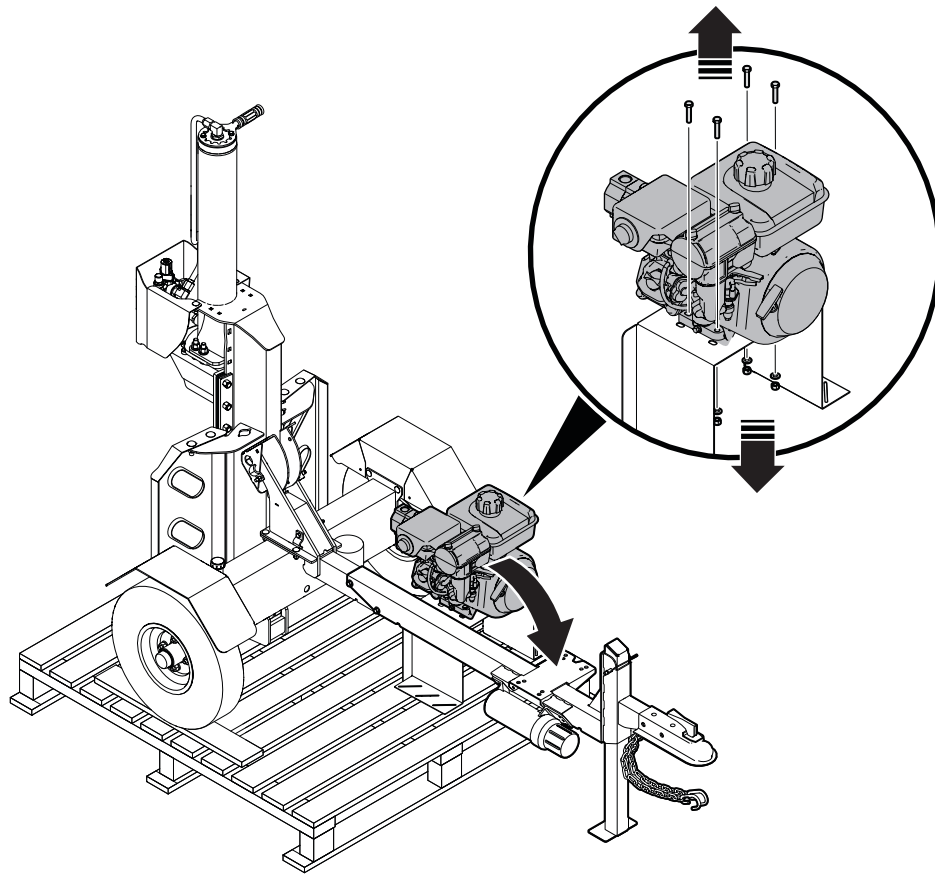


WXT20V

10

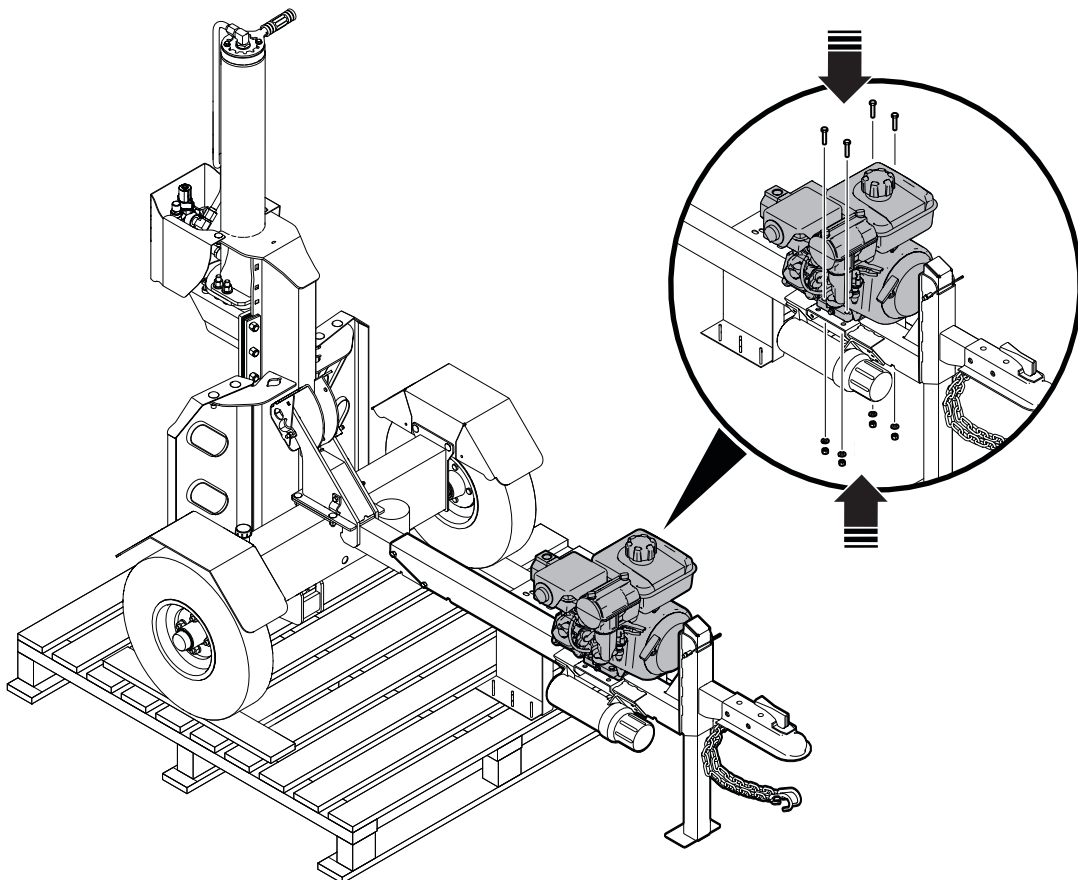


11

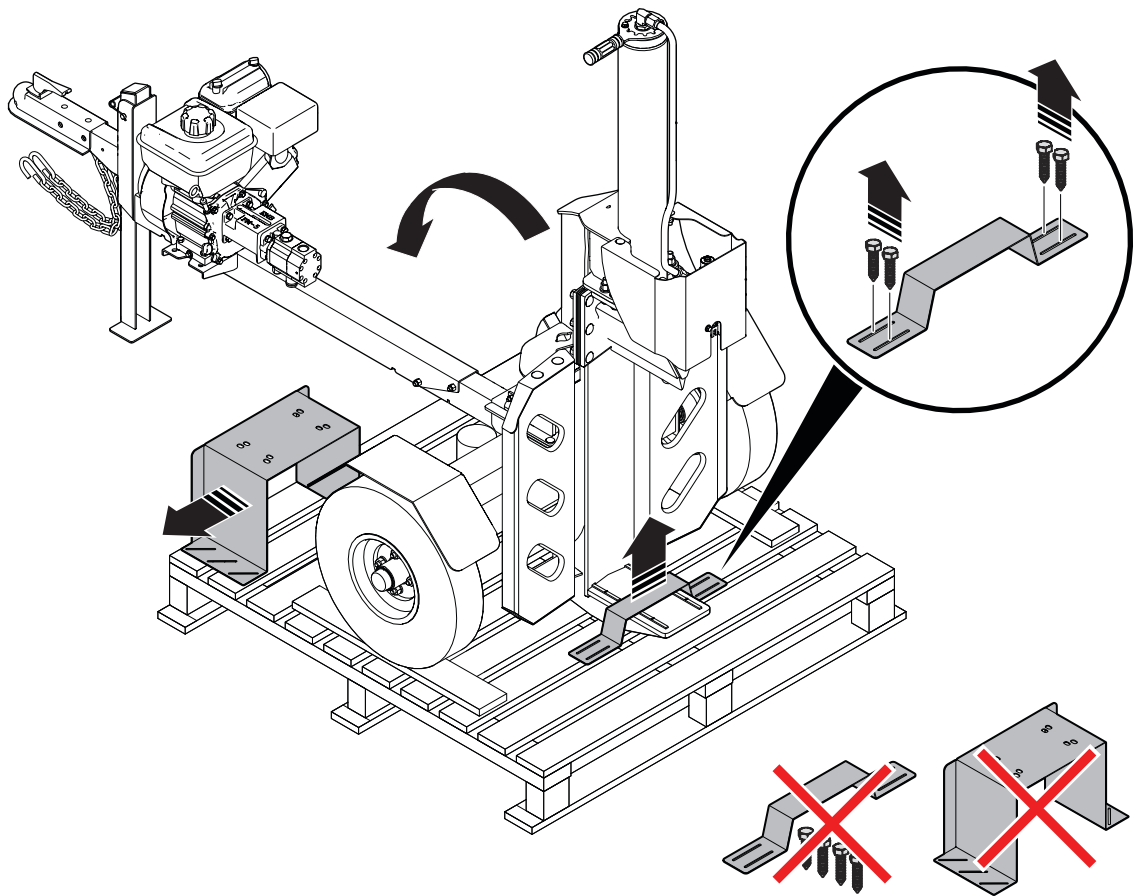


WXT20V


12

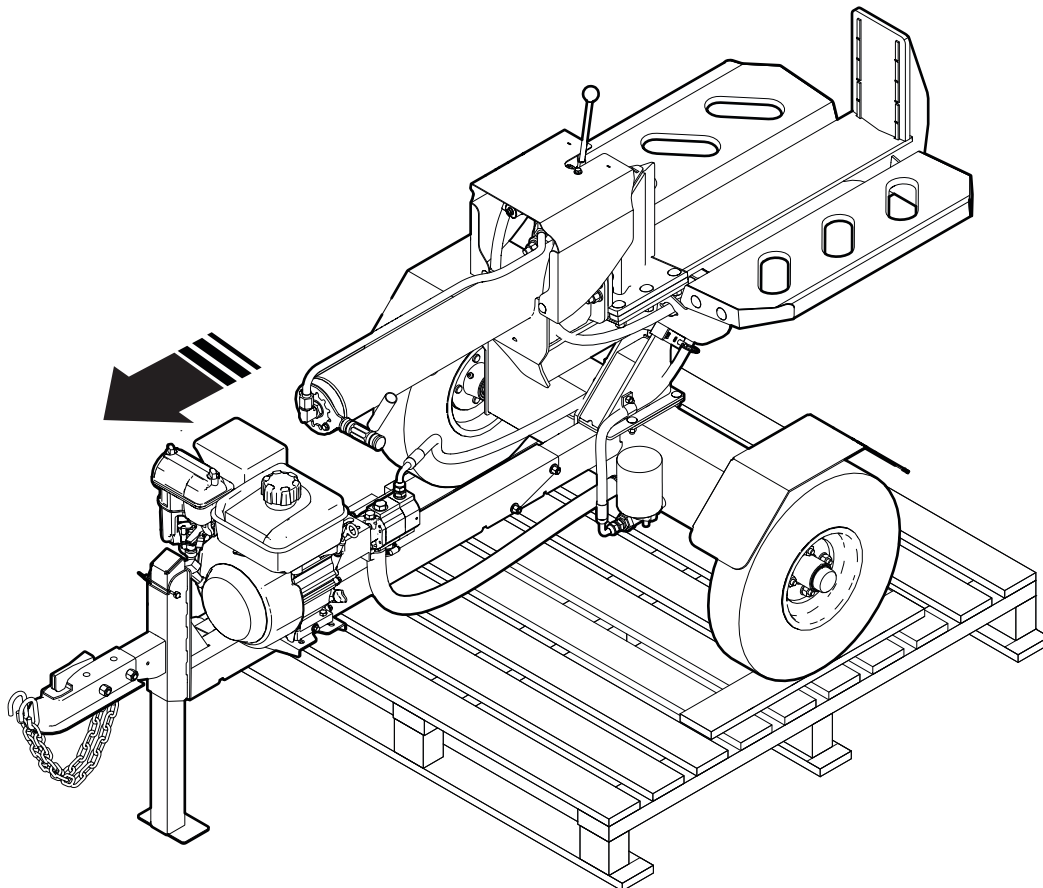

1


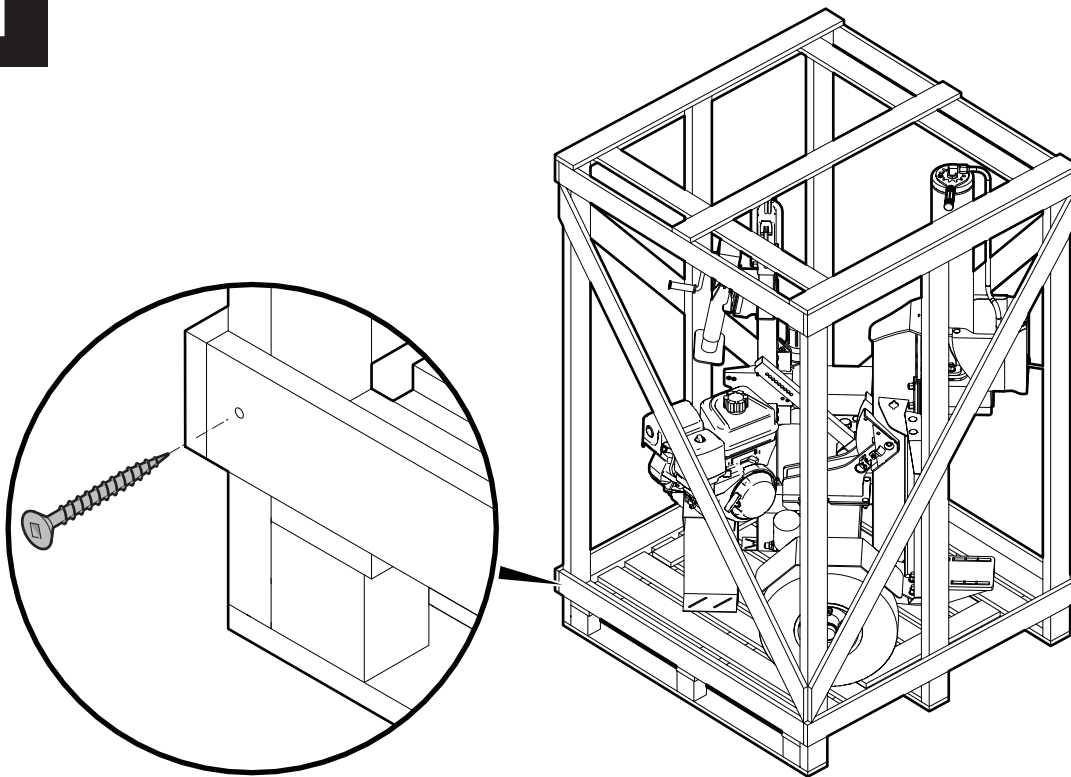


2

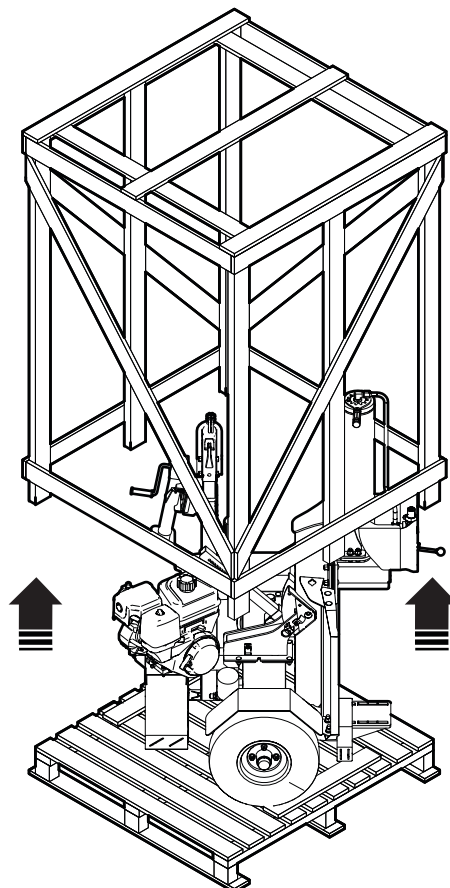



WXT30V

3

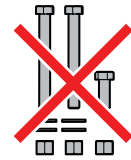
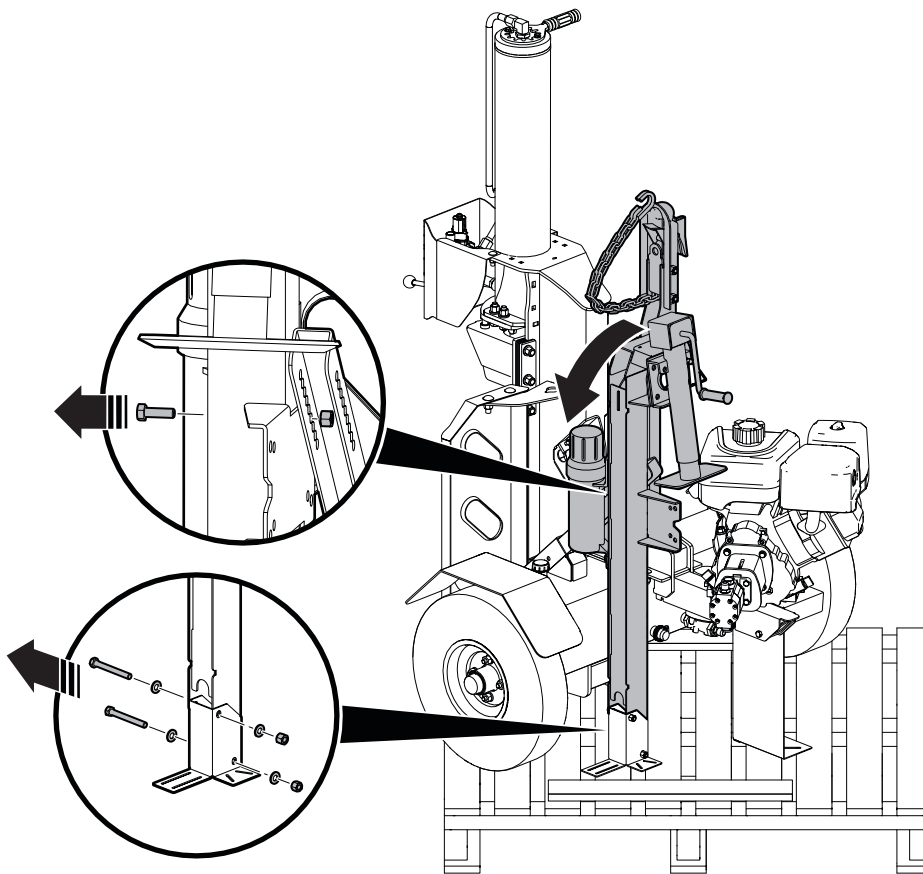


WXT30V


4

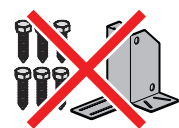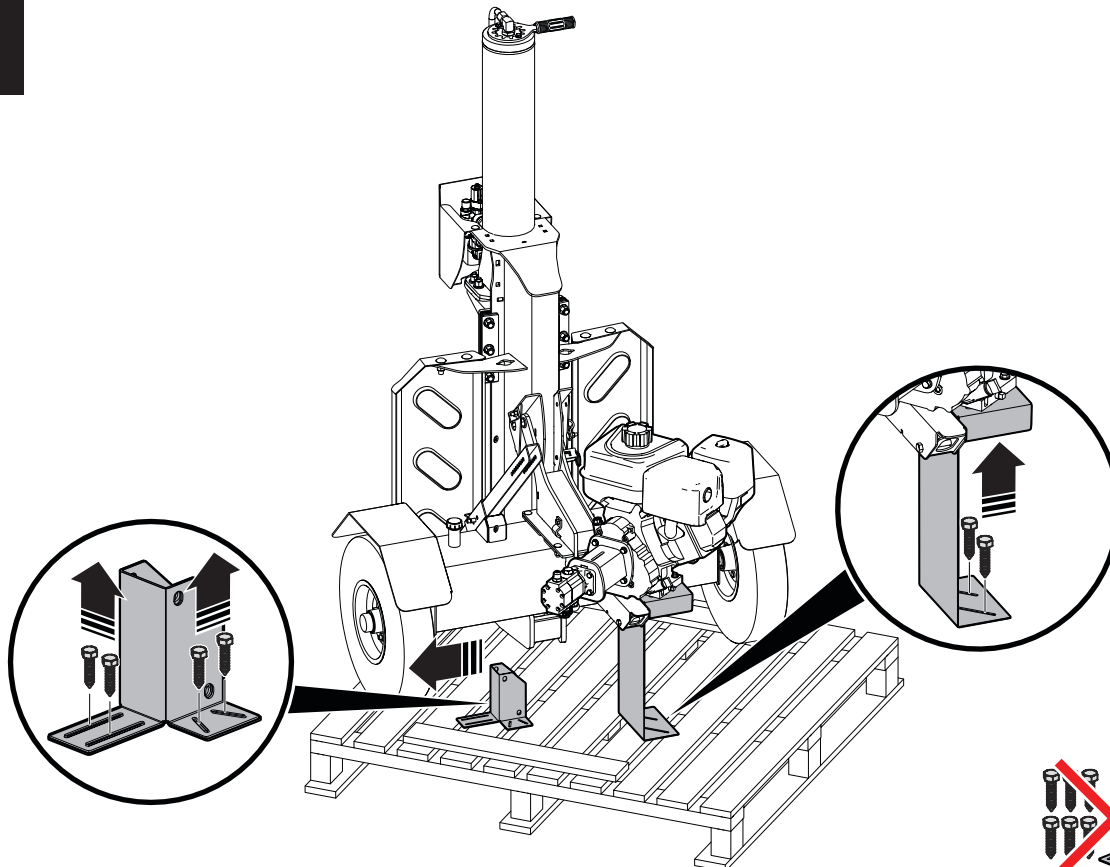

5

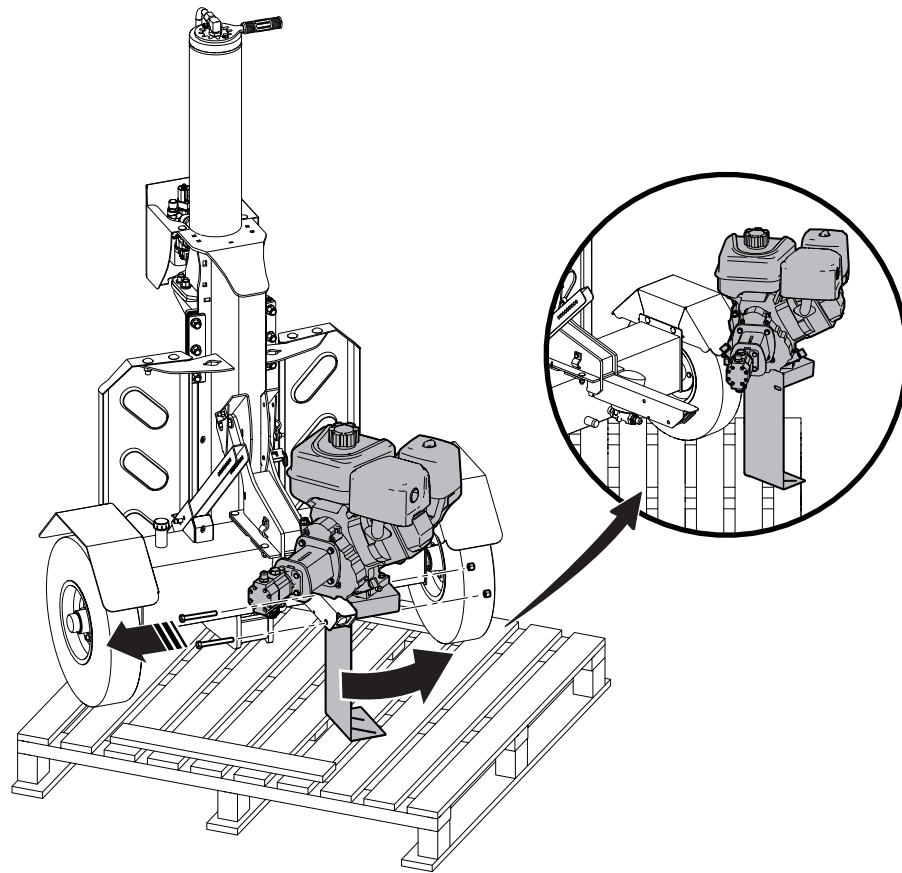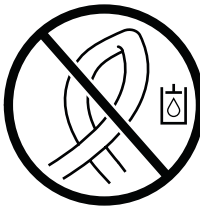


6

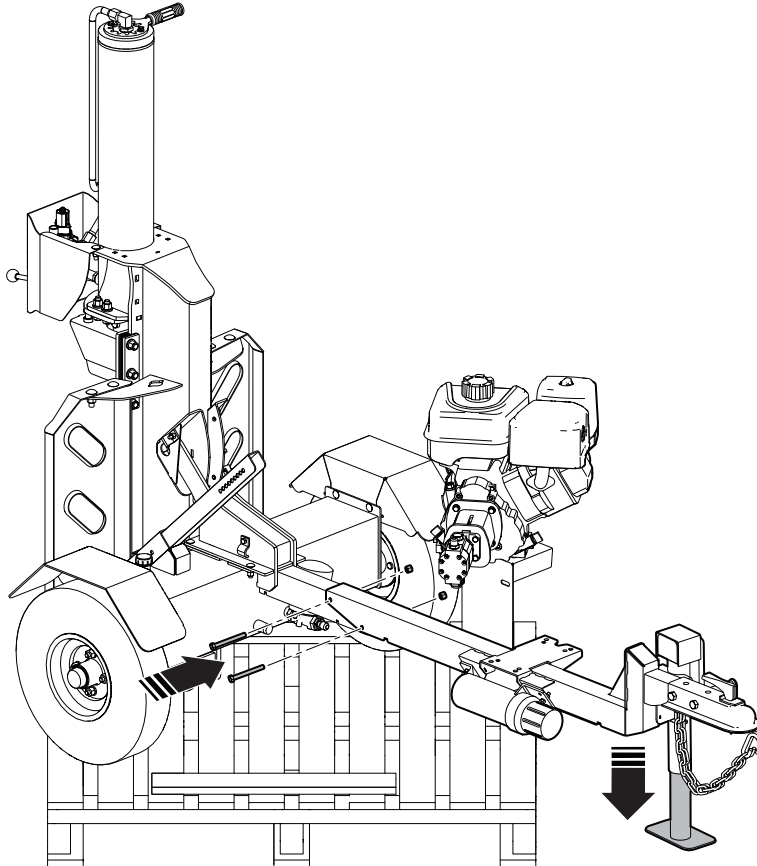


WXT30V

7


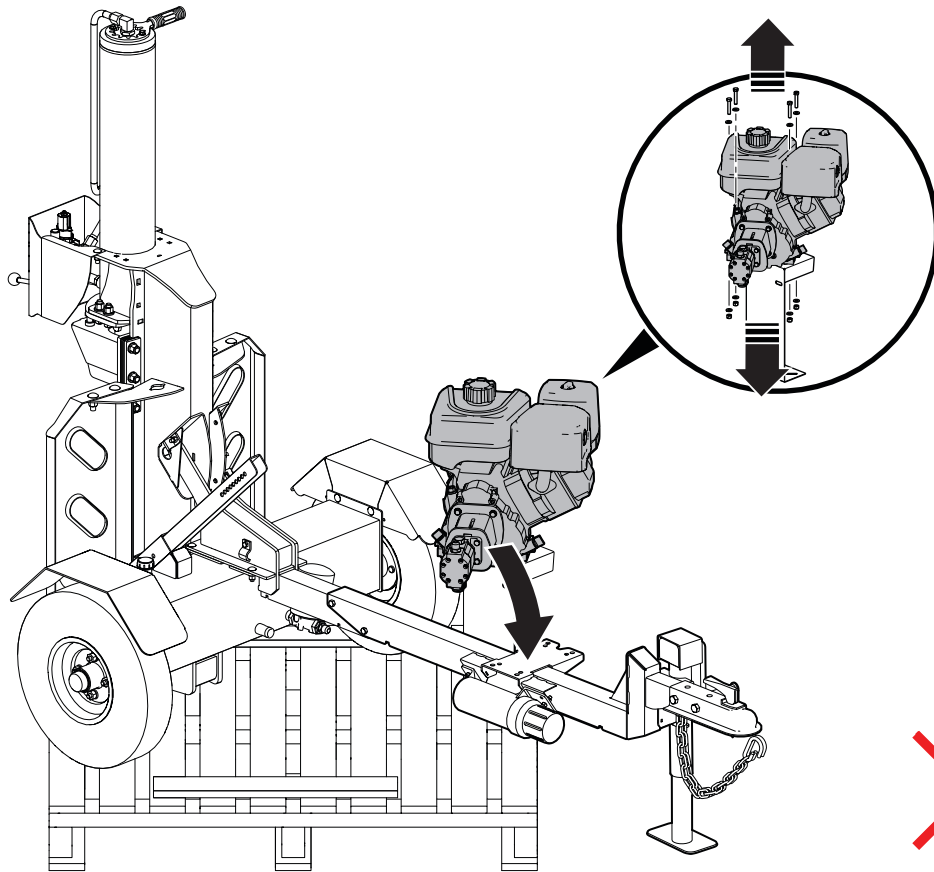


WXT30V

8

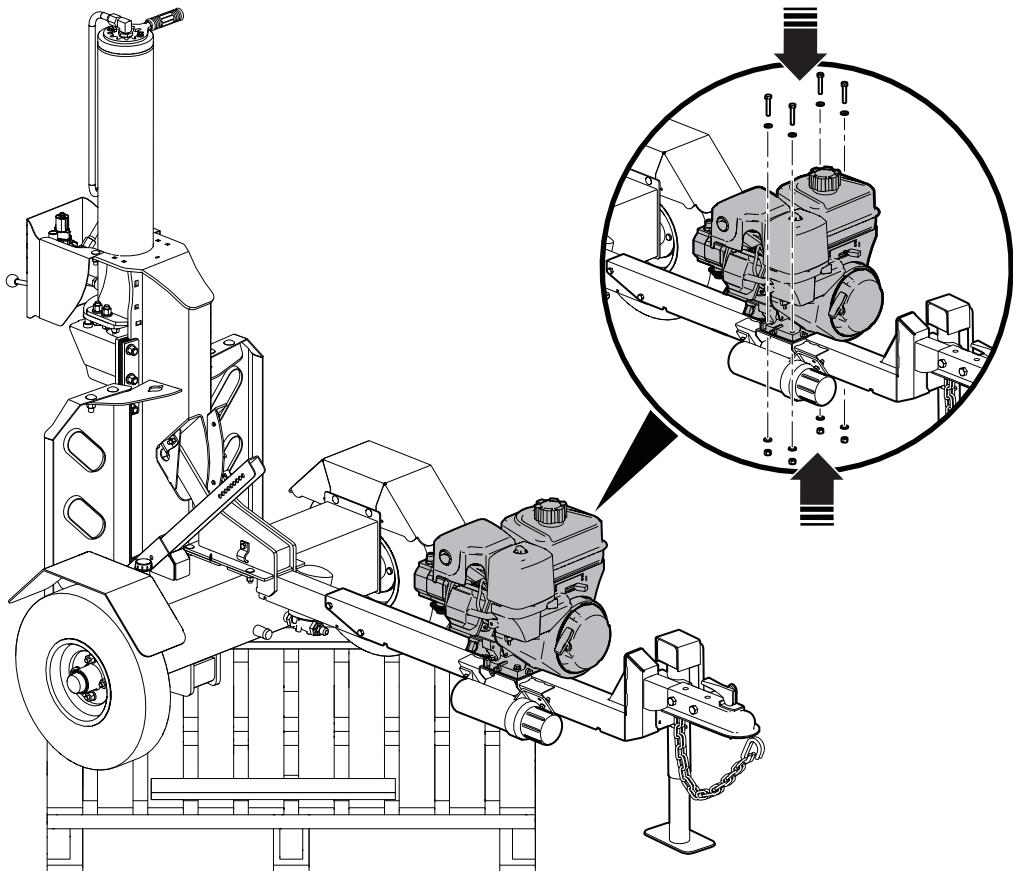



9

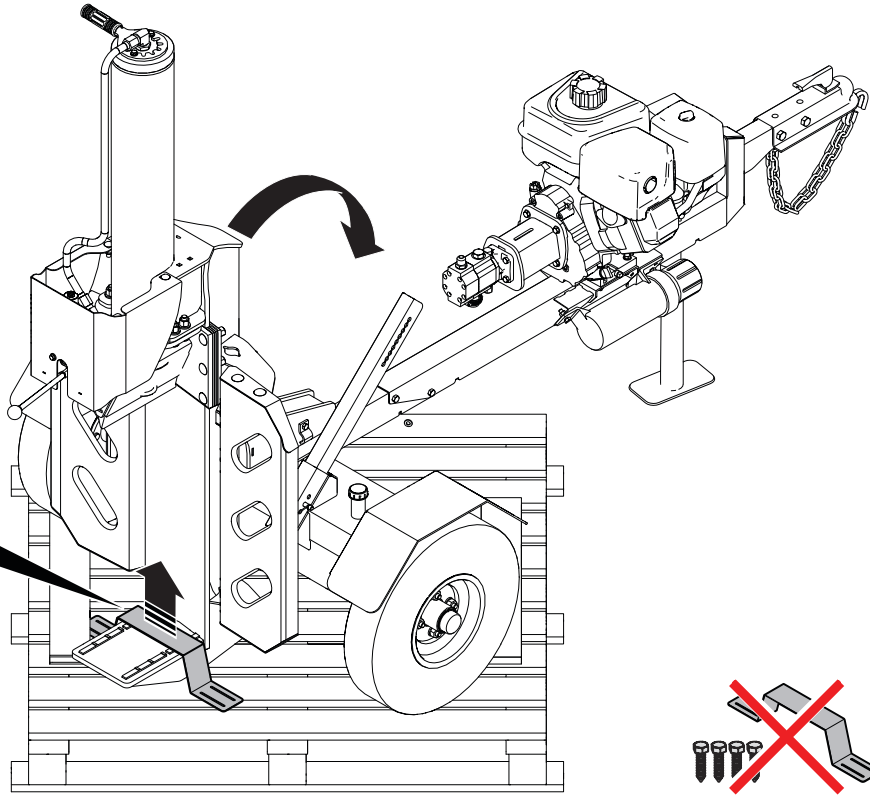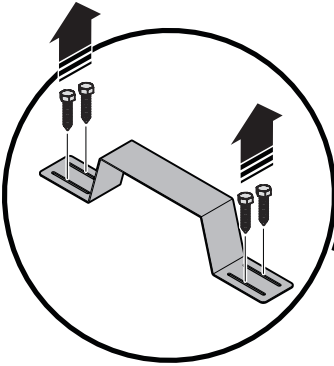

WXT30V

10

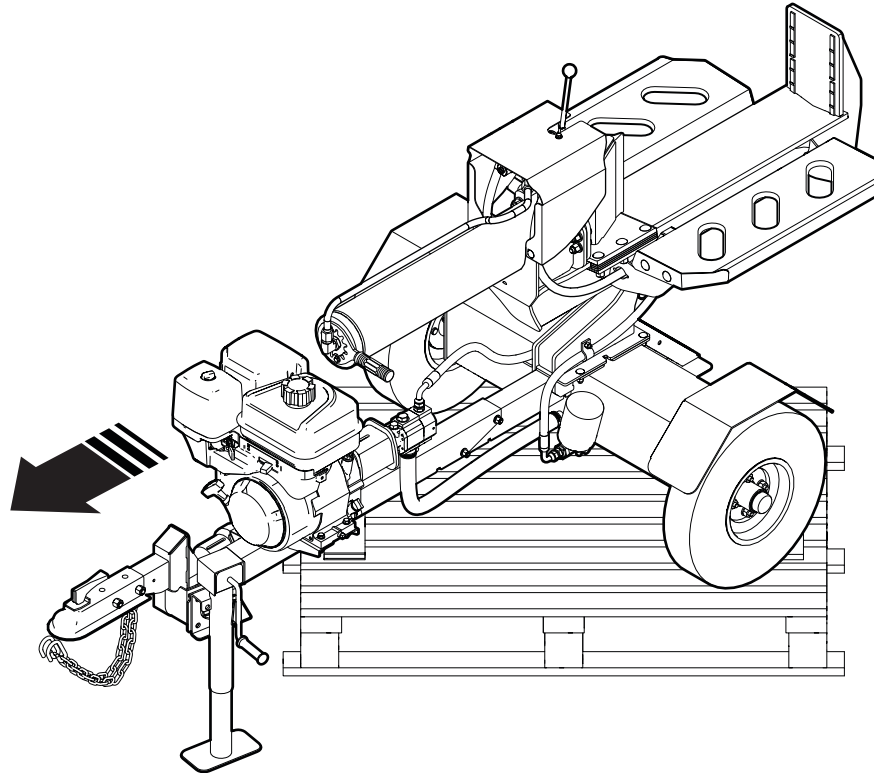

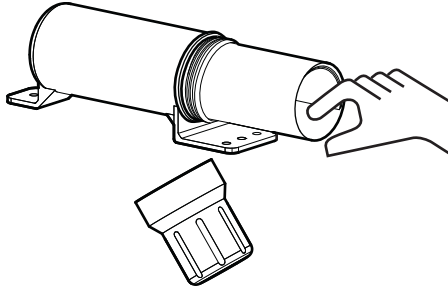

Before First Use Checklist

Do the following inspections before you use the machine for the first time.

- _____ All support stands move freely.
- _____ Machine controls function correctly.
- _____ All fasteners are torqued to the correct specifications.
- _____ All grease points are lubricated.
- _____ Hydraulic system and cylinders function correctly.
- _____ Hydraulic controls move freely.
- _____ Hydraulic fluid reservoir level is correct.
- _____ Hydraulic connections are tight, and hoses and fittings are in good condition.
- _____ There are no hydraulic leaks.
- _____ Engine starts and operates, and the fluid levels are correct.
- _____ Tire pressure is correct (see the tire sidewall).
- _____ Tires are in good condition.
- _____ Split-bed latch works correctly.
- _____ Operator's Manual is in the document tube.
- _____ Purchased accessories are included, if applicable.

Safety Checks

- _____ All safety labels are applied and legible.
- _____ All guards and shields are installed.
- _____ Wheel lug nuts are tightened to the correct torque.
- _____ A retainer is installed through each hitch point.
- _____ Operating and safety instructions were reviewed.
- _____ Rear reflectors are present and not damaged.

WXT20V or WXT30V

- _____ Safety chains are on the ball-mount hitch.
- _____ Trailer jack functions correctly (WXT30V)
- _____ If the light kit was purchased, all lights operate correctly (for example, warunning, brake, turn signal, license plate).

Specifications

This section provides torque specification information.

Bolt Torque

IMPORTANT! If you replace hardware, use fasteners of the same grade.

IMPORTANT! The torque specifications in these tables are for non-greased or non-oiled threads. Do not grease or oil fastener threads unless otherwise indicated. When using a thread lock, increase the specified torque 5%.



Bolt grades are identified by the marks on top of the bolt head.

These bolt torque specification tables give the correct torque settings for common bolts and capscrews. Tighten all bolts to the torque that is specified in the table, unless otherwise indicated. Check the bolt tightness periodically.

Imperial Bolt Torque Specifications

Bolt Diameter	Torque					
	SAE Gr. 2		SAE Gr. 5		SAE Gr. 8	
	lbf•ft	N•m	lbf•ft	N•m	lbf•ft	N•m
1/4 inch	6	8	9	12	12	17
5/16 inch	10	13	19	25	27	36
3/8 inch	20	27	33	45	45	63
7/16 inch	30	41	53	72	75	100
1/2 inch	45	61	80	110	115	155
9/16 inch	60	95	115	155	165	220
5/8 inch	95	128	160	215	220	305
3/4 inch	165	225	290	390	400	540
7/8 inch	170	230	420	570	650	880



SAE Gr. 2



SAE Gr. 5



SAE Gr. 8

Metric Bolt Torque Specifications

Bolt Diameter	Torque			
	Gr. 8.8		Gr. 10.9	
	lbf•ft	N•m	lbf•ft	N•m
M3	0.4	0.5	1.3	1.8
M4	2.2	3	3.3	4.5
M6	7	10	11	15
M8	18	25	26	35
M10	37	50	52	70
M12	66	90	92	125
M14	83	112	116	158
M16	166	225	229	310
M20	321	435	450	610
M30	1,103	1,495	1,550	2,100



8.8



10.9

Hydraulic Fitting Torque

Tighten flare-type tube fittings:

1. Check the flare and flare seat for defects that might cause leaks.
2. Align the tube with the fitting before tightening.
3. Hand-tighten the swivel nut until it is snug.
4. To prevent the tube from twisting, use two wrenches. Place one wrench on the connector body and tighten the swivel nut with the second wrench. Torque the fitting to the correct specification.

If a torque wrench is not available, use the flats from finger tight (FFFT) method.

Hydraulic Fitting Torque Specifications					
Tube size OD	Hex size across flats	Torque		Flats from finger tight	
		lbf•ft	N•m	Flats	Turns
Inches	Inches				
3/16	7/16	6	8	2	1/6
1/4	9/16	11–12	15–17	2	1/6
5/16	5/8	14–16	19–22	2	1/6
3/8	11/16	20–22	27–30	1-1/4	1/6
1/2	7/8	44–48	59–65	1	1/6
5/8	1	50–58	68–79	1	1/6
3/4	1-1/4	79–88	107–119	1	1/8
1	1-5/8	117–125	158–170	1	1/8

Specifications are for non-lubricated connections.

Lug Nut Torque



WARNING!

Wheel lug nuts must be installed and kept at the correct torque to prevent loose wheels, broken studs, or possible separation of a wheel from the axle.


It is an extremely important safety procedure to apply and maintain the correct torque on lug nuts that secure the wheel to the trailer axle. A calibrated torque wrench is the best tool to make sure that the correct amount of torque is applied to a fastener.

Tighten wheel lug nuts to the correct torque before the first use and after each wheel removal. After a wheel is installed, check and torque the lug nuts after the first 10 miles (16 km), 25 miles (40 km), and 50 miles (80 km). Check the lug nut torque periodically thereafter.

- Start all lug nuts onto the threads by hand.
- Tighten lug nuts in stages, following the pattern shown below the Lug Nut Torque Specifications table.

Lug Nut Torque Specifications				
Wheel size	Units	First stage	Second stage	Third stage
8 inch	lbf•ft N•m	12–20 16–26	30–35 39–45.5	45–55 58.5–71.5
12 inch	lbf•ft N•m	20–25 26–32.5	35–40 45.5–52	50–60 65–78
13 inch	lbf•ft N•m	20–25 26–32.5	35–40 45.5–52	50–60 65–78
14 inch	lbf•ft N•m	20–25 26–32.5	50–60 65–78	90–120 117–156
15 inch	lbf•ft N•m	20–25 26–32.5	50–60 65–78	90–120 117–156
16 inch	lbf•ft N•m	20–25 26–32.5	50–60 65–78	90–120 117–156

Lug nut torque pattern:

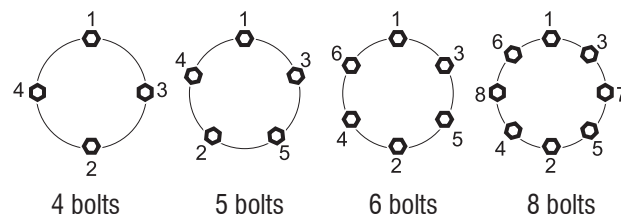



MAKING WORK FEEL MORE LIKE PLAY™

WallensteinEquipment.com

